

ERROR CONTENTS

INDOOR UNIT

Error	Indoor unit LED			Wired remote control	Error
	Operation LED	Timer LED	10°C heat LED		
Serial signal error	Off	2 flash	Off	01	Serial signal (reverse) error, at operation start up
		3 flash	Off	01	Serial signal (reverse) error, during operation
		4 flash	Off	13	Serial signal (forward) error, at operation start up
		5 flash	Off	13	Serial signal (forward) error, during operation
		8 flash	Off	00	Wired remote controller error
Indoor unit thermistor error	2 flash	2 flash	Off	02	Indoor air thermistor error
		3 flash	Off	04	Heat exchanger middle thermistor error
Outdoor unit thermistor error	3 flash	2 flash	Off	0C	Discharge pipe thermistor error
		3 flash	Off	06	Heat exchanger thermistor error
		4 flash	Off	0A	Outdoor air thermistor error
Indoor unit control error	4 flash	2 flash	Off	20	Manual auto button welded
		3 flash	Off	--	Main relay welded
Outdoor unit control error	5 flash	2 flash	Off	17	Current trip error
		3 flash	Off	18	CT abnormal
		5 flash	Off	1A	Compressor location detection error
		6 flash	Off	1b	Outdoor unit fan drive system abnormal
Indoor fan motor error	6 flash	2 flash	Off	12	Abnormal lock (upper fan motor)
		3 flash	Off	12	Abnormal rotation (upper fan motor)
		Off	2 flash	12	Abnormal lock (lower fan motor)
		Off	3 flash	12	Abnormal rotation (lower fan motor)
		5 flash	Off	2E	Damper is not normally open or closed
		Off	4 flash	2E	Damper is not normally open or closed
		Off	5 flash	2E	Damper is not normally open or closed
Refrigerant cycle error	7 flash	2 flash	Off	0F	Discharge temperature abnormal
		3 flash	Off	24	Cooling high pressure abnormal rise
Optional function error	8 flash	4 flash	Off	25	PFC circuit error
Model information error	0.1 sec on/off	0.1 sec on/off	0.1 sec on/off	11	Model information error

OUTDOOR UNIT

	LED A	LED B	LED C	LED D
Communication error (indoor unit A to outdoor unit)	● 1 time	—	—	—
Communication error (indoor unit B to outdoor unit)	—	● 1 time	—	—
Communication error (indoor unit C to outdoor unit)	—		● 1 time	—
Communication error (indoor unit D to outdoor unit)	—	—	—	● 1 time
Discharge pipe temperature sensor	● 2 times	—	—	—
Outdoor heat exchanger temperature sensor	● 3 times	—	—	—
Outdoor temperature sensor	● 4 times	—	—	—
Outdoor 2way valve(A) temperature sensor	● 5 times	—	—	—
Outdoor 2way valve(B) temperature sensor	—	● 5 times	—	—
Outdoor 2way valve(C) temperature sensor	—	—	● 5 times	
Outdoor 2way valve(D) temperature sensor	—	—	—	● 5 times
Outdoor 3way valve(A) temperature sensor	● 6 times	—	—	—
Outdoor 3way valve(B) temperature sensor	—	● 6 times	—	—
Outdoor 3way valve(C) temperature sensor	—	—	● 6 times	—
Outdoor 3way valve(D) temperature sensor	—	—	—	● 6 times
Compressor temperature sensor	● 7 times	—	—	—
Heatsink temperature sensor	● 8 times	—	—	—
Pressure switch A abnormal	● 9 times	—	—	—
Pressure switch B abnormal	● 10 times	—	—	—
Indoor unit connection capacity error	● 11 times	—	—	—
IPM error	● 12 times	—	—	—
Compressor later location error	● 13 times	—	—	—
Compressor can not start to operate	● 14 times	—	—	—
Outdoor fan (upper) motor error	● 15 times	—	—	—
Outdoor fan (lower) motor error	● 16 times	—	—	—
Microcomputer error	● 17 times	—	—	—

● : Slow flashing — : Off