

## ERROR DISPLAY

### INDOOR UNIT

○ : Fast flashing      ● : Slow flashing

Operation lamp : Red lamp

Timer lamp : Green lamp

Large division indication			Small division indication		
Error contents	LED indication		Error contents	LED indication	
thermistor error	Red lamp	● (2 times)	thermistor error (room temp.)	Red lamp	○
	Green lamp	○	thermistor error (heat exchanger)	Green lamp	● (2 times)
control unit error (indoor unit)	Red lamp	● (4 times)	MANUAL AUTO button error	Red lamp	○
	Green lamp	○	power source Hz decision error	Green lamp	● (2 times)
fan motor error (indoor unit)	Red lamp	● (6 times)	lock error	Red lamp	○
	Green lamp	○	r.p.m error	Green lamp	● (2 times)
				Red lamp	○
				Green lamp	● (3 times)

When an error occurs, "Large division indication" is indicated first.

Secondly, "Small division indication" is indicated by pushing "Test" button of remote controller.

ENINDEL CLIMA