

ERROR DISPLAY

INDOOR UNIT (Wall Mounted type)

○ : Fast flashing ● : Slow flashing

Operation lamp : Red lamp

Timer lamp : Green lamp

Large division indication			Small division indication		
Error contents	LED indication		Error contents	LED indication	
thermistor error	Red lamp	● (2 times)	thermistor error (room temp.)	Red lamp	○
	Green lamp	○	thermistor error (heat exchanger)	Green lamp	● (2 times)
control unit error (indoor unit)	Red lamp	● (4 times)	MANUAL AUTO button error	Red lamp	○
	Green lamp	○	power source Hz decision error	Green lamp	● (2 times)
serial error	Red lamp	● (5 times)	serial reverse transmission error	Red lamp	○
	Green lamp	○	serial order transmission error	Green lamp	● (2 times)
fan motor error (indoor unit)	Red lamp	● (6 times)	lock error	Red lamp	○
	Green lamp	○	r.p.m error	Green lamp	● (2 times)
				Red lamp	○
				Green lamp	● (3 times)

When an error occurs, "Large division indication" is indicated first.

Secondly, "Small division indication" is indicated by pushing "Test" button of remote controller.

OUTDOOR UNIT

○ : Fast flashing ● : Slow flashing

LED indication		Contents	
D8	○	Signal reception (from indoor unit A) error	Model information error
	●	—	
D15	○	Signal reception (from indoor unit B) error	0.1s ON/OFF
	●	—	
D10	● (2 times)	Thermistor (discharge pipe) A error	(All LED blink)
	● (3 times)	Thermistor (discharge pipe) B error	
	● (4 times)	Thermistor (heat exchanger) A error	
	● (5 times)	Thermistor (heat exchanger) B error	
	● (6 times)	Thermistor (outdoor temp.) error	
D17		—	
D9	● (2 times)	UNIT A : Heating overload protection	
	● (3 times)	UNIT A : Cooling deicing	
	● (4 times)	—	
	● (5 times)	UNIT A : Discharge temp. protection	
	3s ON / 1s OFF repeated	UNIT A : Heating defrost operation	
D16	● (2 times)	UNIT B : Heating overload protection	
	● (3 times)	UNIT B : Cooling deicing	
	● (4 times)	—	
	● (5 times)	UNIT B : Discharge temp. protection	
	3s ON / 1s OFF repeated	UNIT B : Heating defrost operation	

INDOOR UNIT (CASSETTE TYPE)

○ : Fast flashing ● : Slow flashing

Error display			Error contents
OPERATION lamp	TIMER lamp	SWING lamp	
○	○	Goes off	Model information abnormal (permanent type)
● 4 times	○	Goes off	Drain abnormal (permanent type)
● 6 times	○	Goes off	Indoor fan abnormal
● 2 times	○	Goes off	Room air temperature thermistor open circuit
		○	Room air temperature thermistor short circuit
● 3 times	○	Goes off	Piping thermistor open circuit
		○	Piping thermistor short circuit
● 5 times	○	Goes off	Indoor unit - outdoor unit miswiring