

ERROR DISPLAY

Large division indication			Small division indication		
LED flashing		Error contents	LED flashing		Error contents
operation	timer		operation	timer	
0.5 second 2 times	0.1 second	thermistor	0.1 second	0.5 second 2 times	room temp. thermistor error
			0.1 second	0.5 second 3 times	heat exchanger thermistor error
0.5 second 4 times	0.1 second	control unit (indoor unit)	0.1 second	0.5 second 2 times	MANUAL AUTO button error
			0.1 second	0.5 second 4 times	power source Hz decision error
0.5 second 6 times	0.1 second	fan motor (indoor unit)	0.1 second	0.5 second 2 times	lock error
			0.1 second	0.5 second 3 times	r.p.m. error
0.1 second	0.1 second				model distinction error

Indication :

When an error happens, first indication is "Large division indication".

Indication is switched by pushing TEST OPERATION button between "Large" and "Small".

ENINDEL CLIMA